




# Conduit<sup>®</sup> IP67 Series 200 Base Station

---

MTCDTIP2 Hardware Guide

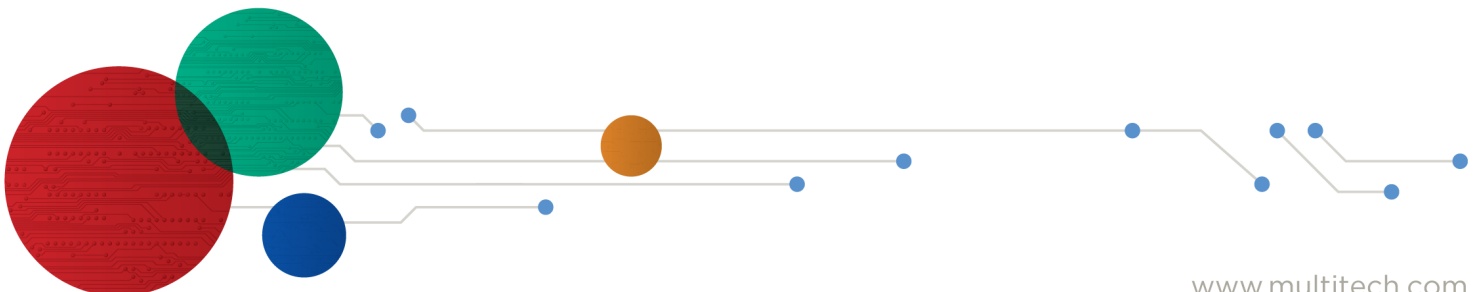

**Conduit IP67 200 Series Base Station Hardware Guide**

Models: MTCDTIP2-EN-B11EKP-D1M, MTCDTIP2-EN-B11EKP-D1L, MTCDTIP2-L4E1-B11EKP-D1L, MTCDTIP2-L4E1-B11EKP-D1M

Part Number: S000744, Version 1.0

**Copyright**

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. **Copyright © 2021 by Multi-Tech Systems, Inc.**

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement.

Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

**Trademarks and Registered Trademarks**

MultiTech, Conduit, and the MultiTech logo are registered trademarks and mPower is a trademark of Multi-Tech Systems, Inc. All other products and technologies are the trademarks or registered trademarks of their respective holders.

**Legal Notices**

The MultiTech products are not designed, manufactured or intended for use, and should not be used, or sold or re-sold for use, in connection with applications requiring fail-safe performance or in applications where the failure of the products would reasonably be expected to result in personal injury or death, significant property damage, or serious physical or environmental damage. Examples of such use include life support machines or other life preserving medical devices or systems, air traffic control or aircraft navigation or communications systems, control equipment for nuclear facilities, or missile, nuclear, biological or chemical weapons or other military applications (“Restricted Applications”). Use of the products in such Restricted Applications is at the user’s sole risk and liability.

MULTITECH DOES NOT WARRANT THAT THE TRANSMISSION OF DATA BY A PRODUCT OVER A CELLULAR COMMUNICATIONS NETWORK WILL BE UNINTERRUPTED, TIMELY, SECURE OR ERROR FREE, NOR DOES MULTITECH WARRANT ANY CONNECTION OR ACCESSIBILITY TO ANY CELLULAR COMMUNICATIONS NETWORK. MULTITECH WILL HAVE NO LIABILITY FOR ANY LOSSES, DAMAGES, OBLIGATIONS, PENALTIES, DEFICIENCIES, LIABILITIES, COSTS OR EXPENSES (INCLUDING WITHOUT LIMITATION REASONABLE ATTORNEYS FEES) RELATED TO TEMPORARY INABILITY TO ACCESS A CELLULAR COMMUNICATIONS NETWORK USING THE PRODUCTS.

The MultiTech products and the final application of the MultiTech products should be thoroughly tested to ensure the functionality of the MultiTech products as used in the final application. The designer, manufacturer and reseller has the sole responsibility of ensuring that any end user product into which the MultiTech product is integrated operates as intended and meets its requirements or the requirements of its direct or indirect customers. MultiTech has no responsibility whatsoever for the integration, configuration, testing, validation, verification, installation, upgrade, support or maintenance of such end user product, or for any liabilities, damages, costs or expenses associated therewith, except to the extent agreed upon in a signed written document. To the extent MultiTech provides any comments or suggested changes related to the application of its products, such comments or suggested changes is performed only as a courtesy and without any representation or warranty whatsoever.

**Contacting MultiTech**

**Knowledge Base**

The Knowledge Base provides immediate access to support information and resolutions for all MultiTech products. Visit <http://www.multitech.com/kb.go>.

**Support Portal**

To create an account and submit a support case directly to our technical support team, visit: <https://support.multitech.com>.

**Support**

Business Hours: M-F, 8am to 5pm CT

Country	By Email	By Phone
Europe, Middle East, Africa:	<a href="mailto:support@multitech.co.uk">support@multitech.co.uk</a>	+(44) 118 959 7774
U.S., Canada, all others:	<a href="mailto:support@multitech.com">support@multitech.com</a>	(800) 972-2439 or (763) 717-5863

**Warranty**

To read the warranty statement for your product, visit <https://www.multitech.com/legal/warranty>. For other warranty options, visit [www.multitech.com/es.go](http://www.multitech.com/es.go).

**World Headquarters**

Multi-Tech Systems, Inc.  
 2205 Woodale Drive, Mounds View, MN 55112  
 Phone: (800) 328-9717 or (763) 785-3500  
 Fax (763) 785-9874

# Contents

<b>Chapter 1 – Product Overview .....</b>	<b>5</b>
Build Options.....	5
Documentation Overview .....	5
Developer Documentation.....	5
Power over Ethernet (PoE) .....	6
<b>Chapter 2 – Specifications and Related Information .....</b>	<b>7</b>
Dimensions.....	7
Specification.....	8
LEDs and Connectors .....	10
LEDs.....	10
Reset Button .....	11
Power Measurements.....	11
Cellular Power Measurements .....	11
Ethernet Models .....	12
<b>Chapter 3 – Labels.....</b>	<b>13</b>
<b>Chapter 4 – Safety Notices .....</b>	<b>14</b>
PoE Safety .....	14
Warnings and Cautions .....	14
Avertissement et mises en garde .....	14
Installation Safety .....	15
Warnings and Cautions .....	15
User Responsibility.....	16
Vehicle Safety.....	16
Notice regarding Compliance with EU Requirements for RF Exposure .....	16
Radio Frequency (RF) Safety .....	16
Sécurité relative aux appareils à radiofréquence (RF).....	17
Interference with Pacemakers and Other Medical Devices .....	17
Potential interference .....	17
Precautions for pacemaker wearers .....	17
<b>Chapter 5 – Regulatory Information.....</b>	<b>19</b>
Industry Canada Class A Notice .....	19
EMC, Safety, and R&TTE Directive (RED) Compliance .....	19
<b>Chapter 6 – Environmental Notices.....</b>	<b>20</b>
Waste Electrical and Electronic Equipment Statement .....	20
WEEE Directive.....	20
Instructions for Disposal of WEEE by Users in the European Union .....	20
Restriction of the Use of Hazardous Substances (RoHS) .....	21

REACH Statement .....	21
Registration of Substances.....	21
Information on HS/TS Substances According to Chinese Standards (in Chinese) .....	22
Information on HS/TS Substances According to Chinese Standards .....	23
<b>Appendix A – Safety Statements .....</b>	<b>24</b>
English .....	24
Bulgarian .....	24
Chinese .....	24
Czech .....	24
Danish .....	24
Dutch .....	24
Estonian .....	25
Flemish .....	25
French .....	25
German .....	25
Hungarian .....	25
Italian .....	25
Korean .....	25
Latvian .....	26
Lithuanian .....	26
Norwegian.....	26
Polish.....	26
Romanian .....	26
Russian .....	26
Spanish .....	26
Swedish .....	26
<b>Index.....</b>	<b>28</b>

## Chapter 1 – Product Overview

The MultiTech Conduit® IP67 200 Series Base Station (MTCDTIP2) is a ruggedized IP67 Base Station connecting thousands of IoT assets to the cloud using the LoRaWAN® protocol. This highly scalable and certified IP67 solution is capable of resisting the harshest environmental factors including moisture, dust, wind, rain, snow and extreme heat, supporting LoRaWAN applications in virtually any environment.

**Important:** Do not attempt to open or disassemble the Base Station. There are no serviceable parts. Opening the enclosure without authorization may void the warranty.

### Build Options

Model	Description
MTCDTIP2-EN-B11EKP-D1M	Ethernet only mPower Programmable Base Station, 8-channel, 868 MHz with internal LoRa antenna.
MTCDTIP2-EN-B11EKP-D1L	Ethernet only mLinux Programmable Base Station, 8-channel, 868 MHz with internal LoRa antenna.
MTCDTIP2-L4E1-B11EKP-D1M	LTE Cat 4 mPower Programmable Base Station, 8-channel, 868 MHz with internal LoRa antenna, and internal cellular antenna.
MTCDTIP2-L4E1-B11EKP-D1L	LTE Cat 4 mLinux Programmable Base Station, 8-channel, 868 MHz with internal LoRa antenna and internal cellular antenna.

### Documentation Overview

The following documents are available at <https://www.multitech.com/brands/conduit-ip67-200>. Select your model to find the documents specific for that device.

Document	Description	Part Number
Conduit IP67 Series 200 Base Station Hardware Guide for MTCDTIP2 Europe/UK	This document. Includes hardware, regulatory, and safety information.	S000744
mPower Software Guide	<i>For mPower models only.</i> Includes steps for configuring and using devices using the mPower platform.	S000727
Conduit IP67 Series 200 Base Station MTCDTIP2 Installation Guide	Steps for getting started with hardware. Ships with the device and is available online.	821030850L
Telit LE910 AT Commands Reference Guide	For L4E1 devices, lists AT Commands and parameters used to communicate with your device.	80502ST10950A

### Developer Documentation

Our developer site includes information for the mLinux platform, advanced mPower information, and LoRa information.


- For mLinux getting started and advanced information, go to <http://www.multitech.net/developer/software/mlinux/>
- For advanced mPower information, go to <http://www.multitech.net/developer/software/aep/>
- For LoRa information, <http://www.multitech.net/developer/software/lora/>

## Power over Ethernet (PoE)

For information on using and troubleshooting PoE, refer to the PoE Application Note <https://www.multitech.com/documents/publications/application-notes/S000678.pdf>

# Chapter 2 – Specifications and Related Information

## Dimensions

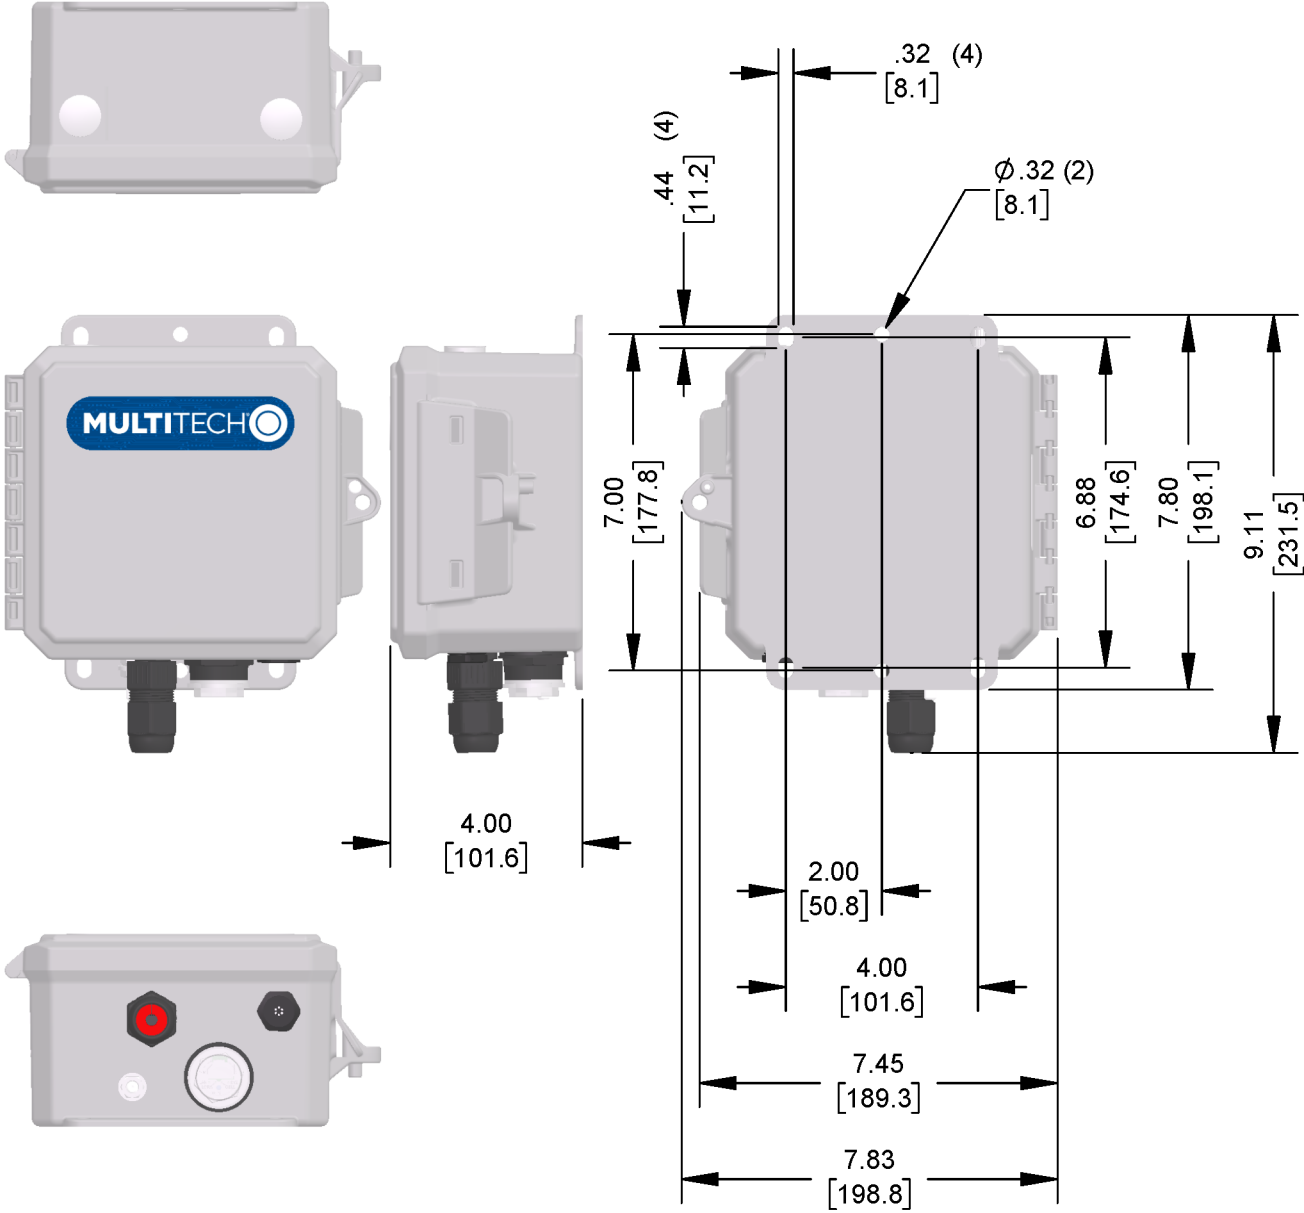

DIMENSIONS IN In [mm]

## Specification


Category	Description
<b>General</b>	
Standards	LoRaWAN 1.0.2 specifications
	LTE FDD Cat 4, 3GPP release compliant (-L4E1 models only)
	HSPA+ with GPRS fallback (-L4E1 models only)
RAM	256MB
Flash	256MB
<b>Radio Frequency</b>	
ISM Band	868 MHz ISM band for Europe
4G/LTE	4G: 1800 (B3), 2600 (B7), 800 (B20), 2100 (B1), 900 (B8), 700 (B28A)
3G	3G: 2000 (B1), 1800 (B3), 900 (B8)
2G	2G: 1800 (B3), 900 (B8)
<b>Physical Description</b>	
Weight	0.95 kg
Dimensions	Refer to Mechanical Drawings for Dimensions.
Chassis Type	IP67-Rated composite
<b>Environment</b>	
Operating Temperature <sup>1</sup>	-40° C to +70° C
Storage Temperature	-40° C to +85° C
Humidity	20%-90% RH, non-condensing
Altitude During Operation	5000 meters maximum
<b>PoE and Power Requirements</b>	
PoE Input Power	42.5 to 57 VDC
PoE Standard:	IEEE 802.3at
Ethernet Speed	10/100 Mbps
Minimum Watts	15W (Minimum watts required to run the device)
<b>Certifications and Compliance</b>	
Outdoor Certification/IP Outdoor Protected Class	IP67 & IEC 60950-222



Category	Description
EMC and Radio Compliance	EN 55032 Class A
	EN 301 489-3 V2.1.1 for RED
	EN 301 489-1 V2.2.0 for RED
	EN 301 489-52 V1.1.0 Harmonized standard for cellular RED
	EN 300 220-1 V3.1.1
	EN 300 220-2 V3.1.1
	EN 300 328 V2.1.1
	EN 301 489-19
	EN 301 511 V9.0.2
	EN 301 893 V2.1.1
	EN 301 908-1 V11.1.1
	EN 301 902-2 V11.1.1
	EN 301 908-13 V11.1.1
	EN 62311-2008
Safety Compliance	IEC 62368-1 2nd Ed
	IEC 62368-1

<sup>1</sup>Product has been tested to +70° C excluding PoE supply. PoE supply temperature rating and operation depend on the environment where the PoE supply is located. The selected PoE supply must be designed and certified to limit power source (LPS) and meet MTCDTIP2 power ratings.


## LEDs and Connectors

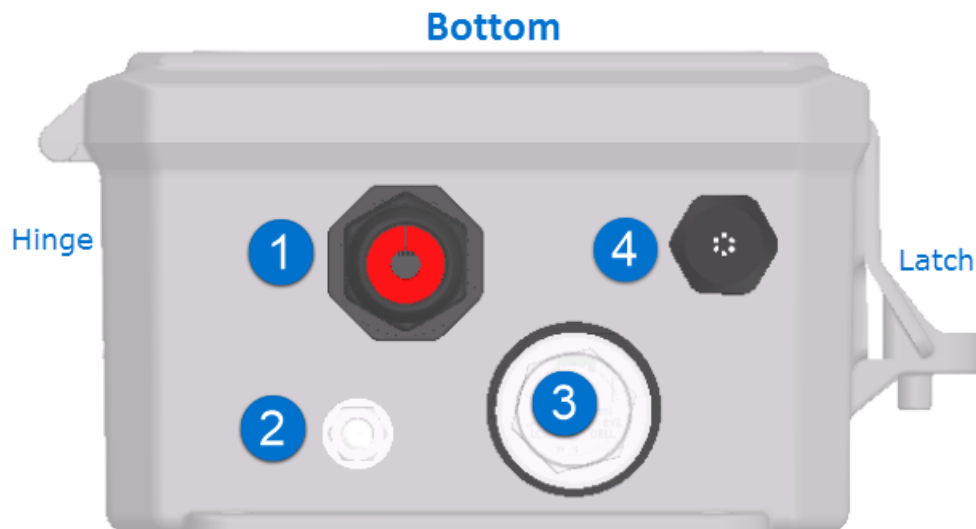


#	Connector	Description
1	Ethernet Port	Ethernet port with IP67 rated cable gland.
2	Grounding Stud	Connector for ground wire.
3	SIM Slot and LEDs	Under a plastic cover. For all models, LEDs. For cellular models, a SIM holder (3FF micro SIM).

**Important:** DO NOT block the vent valve.

### LEDs

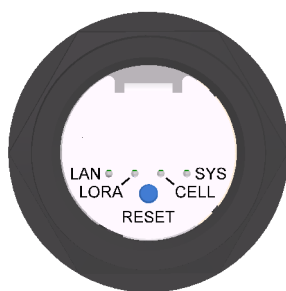

LoRa only models

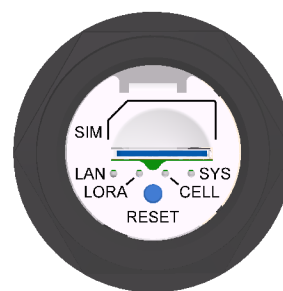

Cellular models


Label	Description
LAN	Lights when Ethernet is connected. Blinks when there is data.
LORA	Lights when LoRa software is active.
SYS	Blinks when operating system is fully loaded.
CELL	<i>Cellular models only.</i> Lights when there is power to the radio. Blinks when the SIM is registered with the carrier.

## Reset Button

You need:

- A slim screwdriver (1 or 2mm), paperclip, or similar thin object that can fit into the reset hole.

The following is the default condition for the RESET button on the device. You can program a change to the behavior of the button if needed. To reset the device:

1. Remove the clear plastic cap.
- 
2. Find the hole labeled RESET. The reset button is recessed.
  3. Use the screwdriver or paperclip to press and release the RESET button as follows:
    - To reboot, press RESET for less than 3 seconds.
    - To reboot and restore user-defined defaults (if previously set), press RESET for 3 to 29 seconds.
    - To reboot, restore factory settings, and erase user-defined defaults, press RESET for 30 seconds or longer.
  4. Reattach the plastic cover and tighten to 10.5 lbf.in (12 kgf.cm).

**Note:** The device reboots when restoring settings.

## Power Measurements

### Cellular Power Measurements

**Note:**

- Multi-Tech Systems, Inc. recommends that you incorporate a 10% buffer into the power source when determining product load.
- **Maximum Power:** The continuous current during maximum data rate with the radio transmitter/LoRa at maximum power.
- **Tx Pulse:** The average peak current during HSDPA/LTE connection with LoRa at Max power.
- **Inrush Charge:** The total inrush charge at power on.

Voltage	Power Down Mode via Radio Command	Cellular Call Box Connection (No Data)	Average Measured Current at Max Power	TS Pulse Average Peak Current for HSDPA/ LTE	Total Inrush Charge measured in MilliCoulombs	Total Inrush Charge DURATION during Powerup (INRUSH Duration)
<b>LTE BAND 7 (2535 Mhz)</b>						
37VDC POE	51 mA	53 mA	212 mA	388 mA	1.16 mC	8.98 mS
57VDC POE	41 mA	42 mA	151 mA	276 mA	1.06 mC	8.0 mS
<b>WCDMA Band 1 (1922.4 MHz)</b>						
37VDC POE	47 mA	51 mA	218 mA	380 mA	1.16 mC	8.98 mS

Voltage	Power Down Mode via Radio Command	Cellular Call Box Connection (No Data)	Average Measured Current at Max Power	TS Pulse Average Peak Current for HSDPA/ LTE	Total Inrush Charge measured in MilliCoulombs	Total Inrush Charge DURATION during Powerup (INRUSH Duration)
57VDC POE	41 mA	41 mA	153 mA	272 mA	1.06 mC	8.0 mS
<b>EGSM (900 MHz)</b>						
37VDC POE	46 mA	52 mA	158 mA	2.6 A	1.16 mC	8.98 mS
57VDC POE	36 mA	41 mA	110 mA	1.62 A	1.06 mC	8.0 mS

### Ethernet Models

**Note:**

- Multi-Tech Systems, Inc. recommends that you incorporate a 10% buffer into the power source when determining product load.
- **Maximum Power:** The continuous current during maximum data rate with the LoRa at maximum power setting.
- **Tx Pulse:** The average peak current during LoRa transmission.
- **Inrush Charge:** The total inrush charge at power on.

Voltage	Idle Measure	Average Measured Current at Max Power	TS Pulse Average Peak Current for HSDPA/ LTE	Total Inrush Charge measured in MilliCoulombs	Total Inrush Charge DURATION during Powerup (INRUSH Duration)
37VDC POE	49 mA	96 mA	260 mA	0.818 mC	7.61 mS
57VDC POE	34 mA	71 mA	140 mA	0.962 mC	7.70 mS

# Chapter 3 – Labels



**Note:** Actual labels vary depending on the regulatory approval markings and content.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The label shown is not the actual size.

- 1 - MultiTech Model Identification.
- 2 - MultiTech Ordering Part Number.
- 3 - Device Node Number
- 4 - IMEI Number
- 5 - UUID

Label images are not actual size.

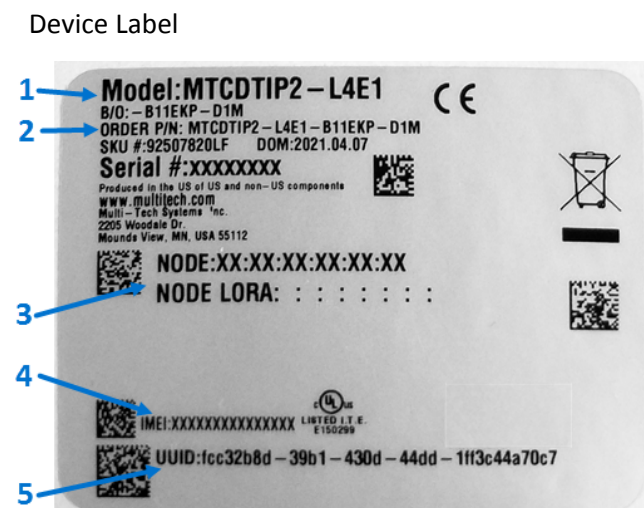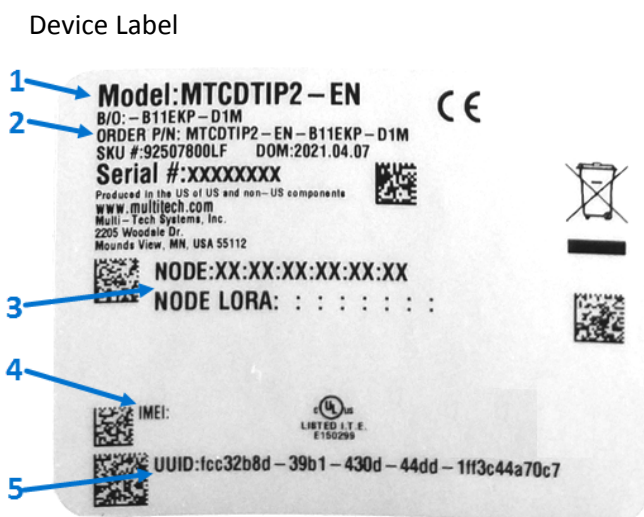

## Chapter 4 – Safety Notices

### PoE Safety

#### Warnings and Cautions

Warning and Caution symbols mean potential danger. You are in a situation that could cause bodily injury. Before working on any equipment, be aware of hazards in the installation area and be knowledgeable about electrical circuitry. Be familiar with standard practices for preventing accidents.



**Warning:** Only trained and qualified personnel should install, replace, or service this equipment. Installation must comply with local and national electrical codes.

Classification of use by: Skilled person.

- When installing or replacing the unit, the ground connection must always be made first and disconnected last.
- Externally ground this equipment using a customer-supplied ground wire before applying power. Contact an electrician if you are uncertain that suitable grounding is available. Refer to *Installing the Ground Wire* instructions in the *Installation Guide*.
- Disconnect PoE power (Ethernet PoE port) before servicing the device.
- Do not work on the system or connect or disconnect cables during periods of lightning activity.
- This device is not designed or approved to be used in any Hazardous Locations. Do not install or operate device if area is known to be an explosive environment.




#### **CAUTION:**

Power over Ethernet (PoE) Certification does not apply or extend to voltages outside of standard PoE range. PoE range for the MTCDTIP2 is 42.5-57 VDC. Any PoE voltages outside this range have not been evaluated by UL or MULTITECH. The end user supplies the PoE cable. If the cable is to be used outdoors, the cable must be certified for outdoor location.

- Recommended PoE: 802.3at-compliant Type 2 Class 4 Power-over-Ethernet (PoE) Powered Devices (PDs) and require PoE Power Supply Equipment (PSE) that is 802.3at-compliant with minimum 25.5W output power capability.
- This is an 802.3at Type 2 device. For more information, refer to the *Conduit PoE Application Note* (S000678).
- Ethernet port is not designed to be connected to a public Telecommunication (PSTN) or any other connection other than IEEE 802.3-2012 power over Ethernet devices.
- Do not remove product labels.

### Avertissement et mises en garde

Les symboles d'avertissement et de mise en garde indiquent un danger potentiel. Vous vous trouvez dans une situation qui peut entraîner des blessures corporelles. Avant de travailler sur un équipement, vous devez être conscient des dangers potentiels dans la zone d'installation et connaître les circuits électriques. Familiarisez-vous avec les pratiques normalisées de prévention des accidents.

 **AVERTISSEMENTS:** Seul un personnel formé et qualifié doit installer, remplacer ou entretenir cet équipement. L'installation doit être conforme aux codes électriques locaux et nationaux.

- Lors de l'installation ou du remplacement de l'appareil, la connexion à la terre doit toujours être effectuée en premier et débranchée en dernier.
- Mettez cet équipement à la terre en utilisant un fil de terre fourni par le client avant de le mettre sous tension. Communiquez avec un électricien si vous n'êtes pas sûr qu'une mise à la terre appropriée soit disponible. Reportez-vous aux instructions relatives à l'*Installation du fil de terre*.
- Déconnectez l'alimentation PoE (port Ethernet PoE) avant de procéder à l'entretien cet appareil.
- Ne travaillez pas sur le système et ne branchez ni débranchez les câbles pendant les périodes d'activité de la foudre.
- Cet appareil n'est ni conçu ni approuvé pour être utilisé dans des endroits dangereux. N'installez pas et ne faites pas fonctionner l'appareil si la zone est connue pour être un environnement où il y a des risques d'explosion.

 **MISES EN GARDE :**

- La certification PoE (Power over Ethernet) ne s'applique pas et ne s'étend pas aux tensions situées en dehors de la plage PoE standard. La plage PoE pour le MTCDTIP2 se situe entre 42,5 et 57 VDC. Toute tension PoE en dehors de la plage indiquée n'a pas été évaluée par UL ou MULTITECH. L'utilisateur final fournit le câble PoE. Ce câble doit être adapté à un emplacement extérieur. Il s'agit d'un appareil 802.3at de type 2. Pour de plus amples renseignements, reportez-vous à la note d'application PoE de Conduit (S000678).

Le port Ethernet n'est pas conçu pour être connecté à un réseau de télécommunication public (PSTN) ou à toute autre connexion autre que les dispositifs Power over Ethernet IEEE 802.3-2012.

- Ne retirez pas les étiquettes du produit.

## Installation Safety

This information is also available in the Installation Guide, in the box and available at <https://www.multitech.com/brands/conduit-ip67-200>. Select your model to find the correct installation guide for your device.

### Warnings and Cautions

Warning and Caution symbols mean potential danger. You are in a situation that could cause bodily injury. Before working on any equipment, be aware of hazards in the installation area and be knowledgeable about electrical circuitry. Be familiar with standard practices for preventing accidents.

For translations of key cautions and warnings, refer Appendix A.



**Warning:** Only trained and qualified personnel should install, replace, or service this equipment. Installation must comply with local and national electrical codes. Classification of use by: Skilled person

- When installing or replacing the unit, the ground connection must always be made first and disconnected last.
- Disconnect PoE power (Ethernet PoE port) before servicing the device.
- Do not work on the system or connect or disconnect cables during periods of lightning activity.

- This device is not designed or approved to be used in any Hazardous Locations. Do not install or operate device if area is known to be an explosive environment.
- Externally ground this equipment using a customer-supplied ground wire before applying power. Contact an electrician if you are uncertain that suitable grounding is available. Refer to *Installing the Ground Wire* instructions in the Installation Guide (available at <https://www.multitech.com/brands/conduit-ip67-200>). All wall mounting installations are subject to the acceptance of local jurisdiction.

**Note:** MultiTech recommends inspecting the mounting hardware every 3-6 months to ensure it has not become loose or damaged due to weather conditions (such as lightning or wind) or a corrosive environment (such as saltwater).

## User Responsibility

Respect all local regulations for operating your wireless device. Use the security features to block unauthorized use and theft.

## Vehicle Safety

When using your device in a vehicle:

- Do not use this device while driving.
- Respect national regulations on the use of cellular devices in vehicles.
- If incorrectly installed in a vehicle, operating the wireless device could interfere with the vehicle's electronics. To avoid such problems, use qualified personnel to install the device. The installer should verify the vehicle electronics are protected from interference.
- Using an alert device to operate a vehicle's lights or horn is not permitted on public roads.
- UL evaluated this device for use in ordinary locations only. UL did NOT evaluate this device for installation in a vehicle or other outdoor locations. UL Certification does not apply or extend to use in vehicles or outdoor applications.

## Notice regarding Compliance with EU Requirements for RF Exposure

This device also meets the European RF exposure requirements of EN 62311. If an alternate antenna is used, consult user documentation for required antenna specifications.

Compliance of the device with the EU, rules regarding RF Exposure was established and is given with the maximum antenna gain as specified above for a minimum distance of 35 cm between the devices radiating structures (the antenna) and the body of users. Qualification for distances closer than 35 cm (portable operation) would require re-certification.

Wireless devices could generate radiation. Other nearby electronic devices, like microwave ovens, may also generate additional radiation to the user causing a higher level of RF exposure.

## Radio Frequency (RF) Safety

Due to the possibility of radio frequency (RF) interference, it is important that you follow any special regulations regarding the use of radio equipment. Follow the safety advice given below.



- Operating your device close to other electronic equipment may cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.
- Different industries and businesses restrict the use of cellular devices. Respect restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in process. Follow restrictions for any environment where you operate the device.
- Switch OFF your wireless device when in an aircraft. Using portable electronic devices in an aircraft may endanger aircraft operation, disrupt the cellular network, and is illegal. Failing to observe this restriction may lead to suspension or denial of cellular services to the offender, legal action, or both.
- Switch OFF your wireless device when around gasoline or diesel-fuel pumps and before filling your vehicle with fuel.
- Switch OFF your wireless device in hospitals and any other place where medical equipment may be in use.

## Sécurité relative aux appareils à radiofréquence (RF)

À cause du risque d'interférences de radiofréquence (RF), il est important de respecter toutes les réglementations spéciales relatives aux équipements radio. Suivez les conseils de sécurité ci-dessous.

- Utiliser l'appareil à proximité d'autres équipements électroniques peut causer des interférences si les équipements ne sont pas bien protégés. Respectez tous les panneaux d'avertissement et les recommandations du fabricant.
- Certains secteurs industriels et certaines entreprises limitent l'utilisation des appareils cellulaires. Respectez ces restrictions relatives aux équipements radio dans les dépôts de carburant, dans les usines de produits chimiques, ou dans les zones où des dynamitages sont en cours. Suivez les restrictions relatives à chaque type d'environnement où vous utiliserez l'appareil.
- Éteignez votre appareil sans fil dans les avions. L'utilisation d'appareils électroniques portables en avion est illégale: elle peut fortement perturber le fonctionnement de l'appareil et désactiver le réseau cellulaires. S'il ne respecte pas cette consigne, le responsable peut voir son accès aux services cellulaires suspendu ou interdit, peut être poursuivi en justice, ou les deux.
- Éteignez votre appareil sans fil à proximité des pompes à essence ou de diesel avant de remplir le réservoir de votre véhicule de carburant.
- Éteignez votre appareil sans fil dans les hôpitaux ou dans toutes les zones où des appareils médicaux sont susceptibles d'être utilisés.

## Interference with Pacemakers and Other Medical Devices

### Potential interference

Radio frequency energy (RF) from cellular devices can interact with some electronic devices. This is electromagnetic interference (EMI). The FDA helped develop a detailed test method to measure EMI of implanted cardiac pacemakers and defibrillators from cellular devices. This test method is part of the Association for the Advancement of Medical Instrumentation (AAMI) standard. This standard allows manufacturers to ensure that cardiac pacemakers and defibrillators are safe from cellular device EMI.

The FDA continues to monitor cellular devices for interactions with other medical devices. If harmful interference occurs, the FDA will assess the interference and work to resolve the problem.

### Precautions for pacemaker wearers

If EMI occurs, it could affect a pacemaker in one of three ways:

- Stop the pacemaker from delivering the stimulating pulses that regulate the heart's rhythm.
- Cause the pacemaker to deliver the pulses irregularly.
- Cause the pacemaker to ignore the heart's own rhythm and deliver pulses at a fixed rate.

Based on current research, cellular devices do not pose a significant health problem for most pacemaker wearers. However, people with pacemakers may want to take simple precautions to be sure that their device doesn't cause a problem.

- Keep the device on the opposite side of the body from the pacemaker to add extra distance between the pacemaker and the device.
- Avoid placing a turned-on device next to the pacemaker (for example, don't carry the device in a shirt or jacket pocket directly over the pacemaker).

## Chapter 5 – Regulatory Information

### Industry Canada Class A Notice

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

### EMC, Safety, and R&TTE Directive (RED) Compliance



The CE mark is affixed to this product to confirm compliance with the following European Community Directives:

Council Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment;

and

Council Directive 2014/53/EU on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

and

Council Directive 2014/35/EU on the harmonization of the laws of Member States relating to Electrical Equipment designed for use within certain voltage limits.

MultiTech declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be requested at <https://www.multitech.com/landing-pages/events/campaigns/promotions/products/certifications/red-certifications>.

## Chapter 6 – Environmental Notices

### Waste Electrical and Electronic Equipment Statement

**Note:** This statement may be used in documentation for your final product applications.

#### WEEE Directive

The WEEE Directive places an obligation on EU-based manufacturers, distributors, retailers, and importers to take-back electronics products at the end of their useful life. A sister directive, ROHS (Restriction of Hazardous Substances) complements the WEEE Directive by banning the presence of specific hazardous substances in the products at the design phase. The WEEE Directive covers all MultiTech products imported into the EU as of August 13, 2005. EU-based manufacturers, distributors, retailers and importers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

#### Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.

July, 2005



## Restriction of the Use of Hazardous Substances (RoHS)

**Multi-Tech Systems, Inc.**

**Certificate of Compliance**

**2015/863**

Multi-Tech Systems, Inc. confirms that its embedded products comply with the chemical concentration limitations set forth in the directive 2015/863 of the European Parliament (Restriction of the use of certain Hazardous Substances in electrical and electronic equipment - RoHS 3).

These MultiTech products do not contain the following banned chemicals<sup>1</sup>:

- Lead, [Pb] < 1000 PPM
- Mercury, [Hg] < 100 PPM
- Cadmium, [Cd] < 100 PPM
- Hexavalent Chromium, [Cr+6] < 1000 PPM
- Polybrominated Biphenyl, [PBB] < 1000 PPM
- Polybrominated Diphenyl Ethers, [PBDE] < 1000 PPM
- Bis(2-Ethylhexyl) phthalate (DEHP): < 1000 ppm
- Benzyl butyl phthalate (BBP): < 1000 ppm
- Dibutyl phthalate (DBP): < 1000 ppm
- Diisobutyl phthalate (DIBP): < 1000 ppm

Environmental considerations:

- Moisture Sensitivity Level (MSL) =1
- Maximum Soldering temperature = 260C (in SMT reflow oven)

<sup>1</sup>Lead usage in some components is exempted by the following RoHS annex, therefore higher lead concentration would be found in some modules (>1000 PPM);

- Resistors containing lead in a glass or ceramic matrix compound.

## REACH Statement

### Registration of Substances

**Multi-Tech Systems, Inc.** confirms that none of its products or packaging contain any of the Substances of Very High Concern (SVHC) on the REACH Candidate List, in a concentration above the 0.1% by weight allowable limit

The latest **197** substances restricted per the REACH Regulation were **last updated January 2019**. Refer to the following for the most current candidate list of substances: <http://echa.europa.eu/candidate-list-table>.

## Information on HS/TS Substances According to Chinese Standards (in Chinese)

### 依照中国标准的有毒有害物质信息

根据中华人民共和国信息产业部 (MII) 制定的电子信息产品 (EIP) 标准—中华人民共和国《电子信息产品污染控制管理办法》(第 39 号), 也称作中国 RoHS, 下表列出了 Multi-Tech Systems, Inc. 产品中可能含有的有毒物质 (TS) 或有害物质 (HS) 的名称及含量水平方面的信息。

### 有害/有毒物质/元素

成分名称	铅 (PB)	汞 (Hg)	镉 (CD)	六价铬 (CR6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板	O	O	O	O	O	O
电阻器	X	O	O	O	O	O
电容器	X	O	O	O	O	O
铁氧体磁环	O	O	O	O	O	O
继电器/光学部件	O	O	O	O	O	O
ICs	O	O	O	O	O	O
二极管/晶体管	O	O	O	O	O	O
振荡器和晶振	X	O	O	O	O	O
调节器	O	O	O	O	O	O
电压传感器	O	O	O	O	O	O
变压器	O	O	O	O	O	O
扬声器	O	O	O	O	O	O
连接器	O	O	O	O	O	O
LEDs	O	O	O	O	O	O
螺丝、螺母以及其它五金件	X	O	O	O	O	O
交流-直流电源	O	O	O	O	O	O
软件/文档 CD	O	O	O	O	O	O
手册和纸页	O	O	O	O	O	O
底盘	O	O	O	O	O	O

X 表示所有使用类似材料的设备中有害/有毒物质的含量水平高于 SJ/Txxx-2006 限量要求。

O 表示不含该物质或者该物质的含量水平在上述限量要求之内。

## Information on HS/TS Substances According to Chinese Standards

In accordance with China's Administrative Measures on the Control of Pollution Caused by Electronic Information Products (EIP) # 39, also known as China RoHS, the following information is provided regarding the names and concentration levels of Toxic Substances (TS) or Hazardous Substances (HS) which may be contained in Multi-Tech Systems Inc. products relative to the EIP standards set by China's Ministry of Information Industry (MII).

### Hazardous/Toxic Substance/Elements

Name of the Component	Lead (PB)	Mercury (Hg)	Cadmium (CD)	Hexavalent Chromium (CR6+)	Polybrominated Biphenyl (PBB)	Polybrominated Diphenyl Ether (PBDE)
Printed Circuit Boards	O	O	O	O	O	O
Resistors	X	O	O	O	O	O
Capacitors	X	O	O	O	O	O
Ferrite Beads	O	O	O	O	O	O
Relays/Opticals	O	O	O	O	O	O
ICs	O	O	O	O	O	O
Diodes/ Transistors	O	O	O	O	O	O
Oscillators and Crystals	X	O	O	O	O	O
Regulator	O	O	O	O	O	O
Voltage Sensor	O	O	O	O	O	O
Transformer	O	O	O	O	O	O
Speaker	O	O	O	O	O	O
Connectors	O	O	O	O	O	O
LEDs	O	O	O	O	O	O
Screws, Nuts, and other Hardware	X	O	O	O	O	O
AC-DC Power Supplies	O	O	O	O	O	O
Software /Documentation CDs	O	O	O	O	O	O
Booklets and Paperwork	O	O	O	O	O	O
Chassis	O	O	O	O	O	O

**X** Represents that the concentration of such hazardous/toxic substance in all the units of homogeneous material of such component is higher than the SJ/Txxx-2006 Requirements for Concentration Limits.

**O** Represents that no such substances are used or that the concentration is within the aforementioned limits.

## Appendix A – Safety Statements

The following are translations of key cautions and warnings from the *Conduit IP67 Base Station 200 Series MTCDTIP2 Installation Guide*.

### English

**CAUTION:** Read installation instructions and safety information before starting Base Station installation. Do not connect power until directed to do so.

**WARNING:** If you connected power to the device, disconnect it before continuing.

### Bulgarian

**ВНИМАНИЕ:** Прочетете инструкциите за монтаж и информацията за безопасност, преди да започнете монтаж на базовата станция. Не включвайте захранването, преди да е упоменато.

**ПРЕДУПРЕЖДЕНИЕ:** Ако вече сте включили захранването в устройството, изключете го, преди да продължите.

### Chinese

小心：在开始安装基站前，阅读安装说明和安全信息。在得到指示前请勿连接电源。

警告：如果您已连接设备电源，请中断连接之后再继续安装。

### Czech

**VAROVÁNÍ:** Před zahájením instalace základní stanice si přečtěte pokyny k instalaci a bezpečnostní informace. Nepřipojujte napájení, dokud k tomu nebudete vyzváni.

**VÝSTRAHA:** Pokud jste k zařízení připojili napájení, před pokračováním ho odpojte.

### Danish

**FORSIGTIG:** Læs installationsinstruktionerne og sikkerhedsinformationerne, inden du begynder på installation af basisstationen. Tilslut ikke strømmen, før du bliver bedt om det.

**ADVARSEL!** Hvis du sluttede enheden til strømmen, så frakobl den, inden du fortsætter.

### Dutch

**LET OP:** Lees de installatie-instructies en veiligheidsinformatie voordat u aan de installatie van het Base Station begint. Sluit de stroom pas aan als dit wordt aangegeven.

**WAARSCHUWING!** Als u het apparaat op de stroomtoevoer hebt aangesloten, koppel deze dan los voordat u verder gaat.



## Estonian

**ETTEVAATUST:** Enne alusjaama paigaldust, tutvuge paigaldusjuhiste ja ohutusälase teabega. Ärge ühendage vooluvõrku enne, kui seda on selgesõnaliselt soovitatud.

**HOIATUS:** Kui ühendasite seadme vooluvõrguga, siis võtke pistik enne jätkamist vooluvõrgust välja.

## Flemish

**OPGELET:** Lees de installatie-instructies en veiligheidsinformatie voor u de installatie van het Basisstation start. U mag de stroom pas aansluiten wanneer u de instructie krijgt om dit te doen.

**WAARSCHUWING:** Als u de stroom hebt aangesloten op het apparaat moet u hem loskoppelen voor u doorgaat.

## French

**ATTENTION:** Lisez les instructions d'installation et les consignes de sécurité avant de commencer l'installation de la station de base. Ne faites aucune connexion avant d'avoir reçu des instructions à cet effet.

**AVERTISSEMENT:** Si vous avez déjà effectué une connexion à l'appareil, débranchez-la avant de continuer.

## German

**ACHTUNG:** Vor Installation der Basisstation die Installationsanweisungen und Sicherheitshinweise lesen. Die Stromversorgung erst nach Aufforderung anschließen.

**WARNUNG:** Vor dem Fortfahren die Stromversorgung trennen, falls sie an das Gerät angeschlossen wurde.

## Hungarian

**VIGYÁZAT:** A bázisállomás telepítésének megkezdése előtt olvassa el a telepítési utasításokat és a biztonsági információkat. Ne helyezze áram alá, amíg erre utasítást nem kap.

**FIGYELEM:** Ha az eszközt már áram alá helyezte, a folytatás előtt csatlakoztassa le.

## Italian

**ATTENZIONE:** leggere le istruzioni per l'installazione e le informazioni di sicurezza prima di iniziare l'installazione della stazione di base. Non collegare l'alimentazione fino a quando non viene richiesto.

**AVVERTENZA:** se il dispositivo è stato collegato alla corrente, scollegarlo prima di continuare.

## Korean

**주의:** Base Station 설치를 시작하기 전에 설치 지침과 안전 정보를 읽으십시오. 지시가 있을 때까지 전원 공급 장치를 연결하지 마십시오.

**경고:** 장치에 전원 공급 장치를 연결한 경우, 계속 진행하기 전에 이를 분리하십시오.

## Latvian

**UZMANĪBU:** Pirms uzstādīt bāzes staciju, izlasiet uzstādīšanas norādījumus un drošības informāciju. Nepieslēdziet barošanu, kamēr nav sniegts atbilstošs norādījums.

**BRĪDINĀJUMS.** Ja ierīcei ir pieslēgta barošana, pirms turpināt darbu, atvienojiet to.

## Lithuanian

**ATSARGIAI:** Prieš pradėdami montuoti bazinę stotį, perskaitykite montavimo instrukciją ir saugos informaciją. Elektros maitinimąjunkite tik tada, kai gausite tokį nurodymą.

**ĮSPĖJIMAS:** Jeigu įrenginys buvo prijungtas prie elektros maitinimo, atjunkite jį prieš tęsdami darbą.

## Norwegian

**FORSIKTIG:** Les installasjonsinstruksjonene og sikkerhetsinformasjonen før du starter installasjonen av basestasjonen. Ikke koble til strømmen før du blir bedt om det.

**ADVARSEL:** Hvis du koblet strøm til apparatet, koble den fra før du fortsetter.

## Polish

**PRZESTROGA:** Przed rozpoczęciem montażu stacji bazowej należy zapoznać się z instrukcją montażu oraz informacjami dotyczącymi bezpieczeństwa. Nie należy podłączać zasilania bez wyraźnego polecenia.

**UWAGA:** Jeżeli zasilanie zostało podłączone do urządzenia, należy je odłączyć przed kontynuowaniem prac.

## Romanian

**ATENȚIE:** Înainte de a începe instalarea stației de bază citiți instrucțiunile de instalare și informațiile referitoare la siguranță. Nu conectați la curent până când nu vi se indică să faceți acest lucru.

**AVERTISMENT:** Dacă ați conectat dispozitivul la curent, deconectați-l înainte de a continua.

## Russian

**ВНИМАНИЕ:** Перед началом установки базовой станции прочтите инструкции по установке и информацию по технике безопасности. Не подключайте питание, пока не получите соответствующие указания.

**ПРЕДУПРЕЖДЕНИЕ.** Если вы подключили питание к устройству, отключите его, прежде чем продолжить.

## Spanish

**PRECAUCIÓN:** Lea las instrucciones de instalación y la información de seguridad antes de instalar la estación base. No conecte la alimentación eléctrica del dispositivo hasta que no se le indique.

**ADVERTENCIA:** Si ha conectado la alimentación eléctrica del dispositivo, desconéctela antes de continuar.

## Swedish

**FÖRSIKTIG!** Läs installationsanvisningarna och säkerhetsinformationen innan du påbörjar installationen av basstationen. Koppla inte in strömmen förrän du blir anvisad att göra så.

**WARNING!** Om du har kopplat in strömmen till enheten ska du koppla ut den innan du fortsätter.

# Index

<b>A</b>		<b>LoRa</b> .....10
antenna connectors .....	10	
<b>B</b>		<b>M</b>
build options .....	5	models.....5
<b>C</b>		<b>P</b>
certifications.....8		POE.....6
Chinese hazardous substances		power measurements.....11 12
Chinese version.....22		
English version .....	23	<b>R</b>
Class A		radio frequency interference.....16
Industry Canada .....	19	reboot .....
connectors .....	10	receive sensitivity.....8
		reset .....
<b>D</b>		reset button .....
documentation.....5		restore factory defaults .....
		RoHS.....21
<b>E</b>		<b>S</b>
Ethernet port .....	10	safety
<b>F</b>		RF interference .....
factory defaults.....11		vehicle .....
		specifications.....8
<b>H</b>		sécurité
hazardous substances .....	21	interférences RF.....17
<b>I</b>		<b>T</b>
Industry Canada		transmission .....
Class A .....	19	
interférence des radiofréquences.....17		<b>U</b>
<b>L</b>		user responsibility.....16
LEDs.....10		<b>V</b>
		vehicle safety .....